

MEGADRIVE

AUTOMATION

ELECTRICAL ENGINEERING FOR PLANT & PROCESS

Authorised Distributor



FEATURES

- 1 World's smallest class compact body
- 2 High performance
- 3 Easy to use
- 4 Easy Maintenance

FR-CS80




Compact | Smart | High-performance | Inexpensive

WE HAVE STOCK!

Contact us for pricing

 26 & 27 Fourie Street, Brackenfell, Cape Town.

 +27 (0)21 981 4363

 info@megadrive.co.za

 www.megadrive.co.za

Various Functions in a Small Body Compact and Smart Inverter

Feature

1

World's smallest class compact body



Volume
reduction
to
57 %

Compact size achieved by the low heat generation design


Space saving by the side-by-side installation

- Side-by-side installation is possible*.
Three FR-CS84-012-60 inverters can be installed in space for two conventional models to save space.
A DIN rail installation attachment (FR-UDA[[]]) option can be used.
(excluding inverters FR-CS84-120 to 295)

* Keep the surrounding air temperature of the inverter at 40 °C maximum.

Conventional Model

2 units

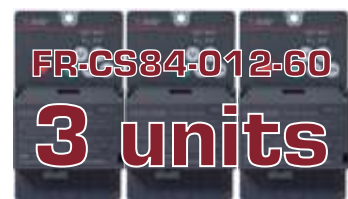

Feature

2

High performance

Compact yet high performance

General-purpose magnetic flux vector control

General-purpose magnetic flux vector control and auto tuning functions are available.


These functions ensure the applications that require high starting torque, such as washing machines, agitators, and transfer machines including conveyors, hoists, and elevators, can benefit from:

- High torque of 150% / 1 Hz is realized (when the slip compensation function is valid).
- Auto tuning

With our "non-rotation" auto tuning function the motor constant (R1) can be automatically calculated.

Brake unit connection

Brake unit can be connected using terminal P/+ and terminal N/-. It is useful for applications require regenerative braking torque during deceleration, such as transfer machines and food machines.

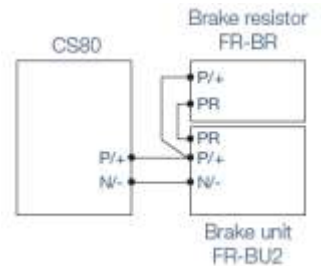

When using the inverter with the brake unit, use the FR-CS84-050-60 or higher capacity inverter

Optimum excitation control

The excitation current is constantly adjusted to its optimum value to drive the motor most efficiently. With a small load torque, a substantial energy saving can be achieved.

Feature

3

Easy to use

Easy-to-read operation panel

Operation panel FR-LU08 (OPTION)

An optional LCD operation panel (FR-LU08) is also available.



Parameter unit FR-PU07 (OPTION)

The parameter unit features helpful settings such as direct input with ten-key pad, operating status display, and help function.

Eight languages are supported.

Parameter settings for up to three units can be saved.



Enclosure surface operation panel FR-PA07 (OPTION)

The operation panel enables inverter operation and monitoring of frequency setting from the enclosure surface.



Shorter startup time with easy setup

RS-485 communication

Using a controller, the inverter can be controlled and monitored via network. The standard model with an RS-485 interface (Mitsubishi inverter protocol, MODBUS RTU protocol) enables communication with the speed of up to 115200 bps.



Shorter startup time with easy setup

Inverter setup software FR Configurator 2

The software is easy to use and has unity as Mitsubishi Electric FA products with MELSOFT common design and good operability.

Free trial version, which contains start-up functions, is available. It can be downloaded at Mitsubishi Electric FA Global Website



Easy-to-follow display improves the operability

Easy connection with GOT

When the automatic connection is enabled, the inverter can communicate with the GOT2000 series or the GOT SIMPLE (to be supported soon) simply by connecting the GOT.



Feature

4

Easy Maintenance

Reduced wiring check time

The wiring can be checked only by lifting the control terminal cover, which makes maintenance work easier



Easy wiring to the control circuit

Spring clamp terminals (control circuit terminals)

Spring clamp terminals*1 provide high reliability and easy wiring.



Easy wiring
Wiring is completed only by inserting the dedicated blade terminal of each cable. Without using the blade terminal, the loose wires can also be connected using a flathead screwdriver.

Easy wiring.
Just insert.



High reliability

- Internal terminal contacts are spring-type. Therefore, wires can be protected against loosening or contact faults due to vibrations during operation on a bogie or during transport.
- Maintenance-free
No additional screw tightening is required

Assures the tensile strength of the DIN standards.

Protected in hazardous environments

The circuit board coating conforms to IEC 60721-3-3 3C2/3S2 for improved environmental resistance.



Front



Back



Variety of Functions to Support Various Applications

Spinning

- **Traverse function**

The traverse function, used for the traverse axis of spinning machine, prevents uneven winding or collapsing.


- Continuous operation function at instantaneous power failure
- Power failure time deceleration-to-stop function

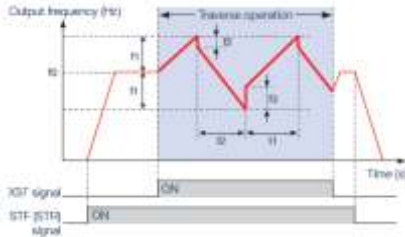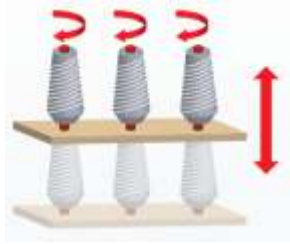

f0: set frequency
 f1: amplitude amount from the set frequency
 f2: compensation amount at transition from acceleration to deceleration
 f3: compensation amount at transition from deceleration to acceleration
 t1: time for acceleration during traverse operation
 t2: time for deceleration during traverse operation

Conveyor

- Increased excitation deceleration
 Increase the loss in the motor by increasing the magnetic flux during deceleration to avoid regenerative overvoltage from occurring and to shorten the deceleration time. The deceleration time can be reduced without using a brake resistor. The tact time can be reduced for a transfer line or the like.
- Power failure time deceleration-to-stop function
- S-pattern acceleration/deceleration
- Communication function

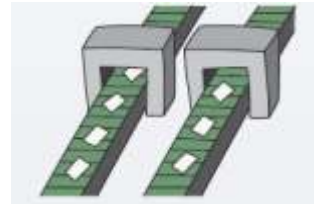

Fan and pump

- **Adjustable 3 points V/F**

The optimal V/F pattern matching the torque characteristics of the facility can be set.

- PID control To save energy in low speed operation:
 PID output shutoff (sleep) function

To shorten the start-up time of PID control:

PID automatic switchover function

To use various types of detectors:


PID measured value inputs in voltage (0 to 5 V / 0 to 10 V) or current (4 to 20 mA) (set point: voltage only)

- Automatic restart after instantaneous power failure
- Regeneration avoidance function




Fountain

- General-purpose magnetic flux vector control
- Power failure time deceleration-to-stop function
- Continuous operation function at instantaneous power failure
- Brake unit connection

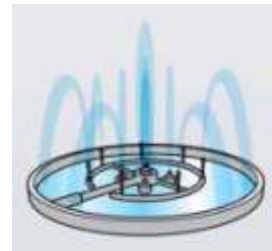



Wood processing machine

- Continuous operation function at instantaneous power failure
- Power failure time deceleration to stop function
- Tripless operation
- Multi-speed setting

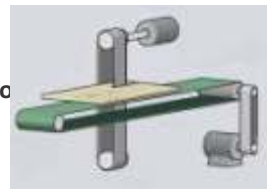

Food machinery

- General-purpose magnetic flux vector control
- Multi-speed function (Up to 15-speed switching operation)
- S-pattern acceleration/deceleration
- Brake unit connection

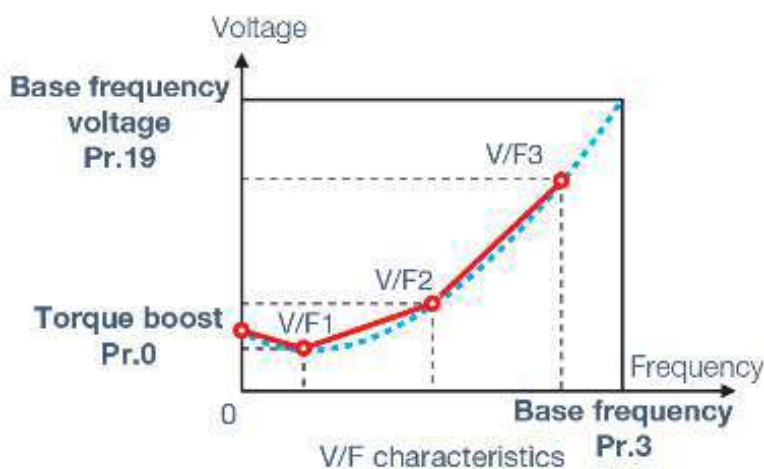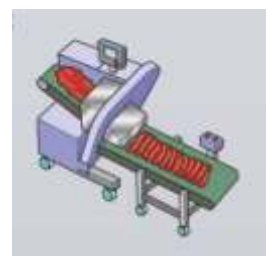

Lineup

FR-CS84 - 080 - 60

| Symbol | Voltage class |
|--------|---------------|
| 2 | 200 V class |
| 4 | 400 V class |

| Symbol | Power supply |
|--------|--------------|
| None | Three-phase |
| S | Single-phase |

| Symbol | Description |
|------------|----------------------------|
| 012 to 295 | Inverter rated current (A) |

| Symbol | Circuit board coating (conforming to IEC 60721-3-3 3C2/3S2) |
|--------|--|
| 60 | With |

| Power supply | Inverter model | 012 | 022 | 036 | 050 | 080 | 120 | 160 | 230 | 295 |
|-------------------|----------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Three-phase 400 V | FR-CS84-[-]-60 | ● | ● | ● | ● | ● | ● | ● | ● | ● |

| Power supply | Inverter model | 025 | 042 | 070 | 100 |
|--------------------|-----------------|-----|-----|-----|-----|
| Single-phase 200 V | FR-CS82S-[-]-60 | ● | ● | ● | ● |

●: Released model



Environment consciousness in global standard

Compliant with the EU RoHS Directive (Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment)

Being RoHS compliant, the inverter is friendly to people and the environment.

[RoHS Directive]

RoHS Directive requires member nations to guarantee that new electrical and electronic equipment sold in the market after July 1, 2006 do not contain lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyl (PBB) and polybrominated diphenyl ether (PBDE) flame retardants. The <G> mark indicating RoHS Directive compliance is on the package.

EMC Directive compliant noise filter

Compliance to the EMC Directive (EN standard) is easier.

Noise filter option which is compliant with the EMC Directive (EN61800-3 2nd Environment Category C3) is available.

Compatibility with various standards

The inverters are compatible with UL, cUL, EC Directives (CE marking).

The single-phase 100 V power input model is not compliant with the EMC Directive



Rating

*1: The applicable motor capacity is the maximum allowable capacity of the motor with respect to a Mitsubishi Electric 4-pole standard motor.

*2: The rated output capacity indicated assumes that the output voltage is 230 V for single-phase 200 V class and 440 V for three-phase 400 V class.

*3: The percentage of the overload current rating is the ratio of the overload current to the inverter's rated output current. For repeated duty, allow time for the inverter and motor to return to or below the temperatures under 100% load.

For single-phase 200 V model, the bus voltage decreases to power failure detection level and the load of 100% or higher may not be available if the automatic restart after instantaneous power failure function (Pr.57) or the power failure stop function (Pr.261) is set and power supply voltage is low while the load increases.

*4: When operating the inverter with surrounding air temperature of 50°C, the rated output current is shown in parentheses.

*5: The maximum output voltage does not exceed the power supply voltage. The maximum output voltage can be changed within the setting range. However, the maximum point of the voltage waveform at the inverter output side is the power supply voltage multiplied by about .2.


*6: The power supply capacity is the value at the rated output current.

The input power impedances (including those of the input reactor and cables) affect the value.


| Model | FR-CS84-□-60 | 012 | 022 | 036 | 050 | 080 | 120 | 160 | 230 | 295 | - | - | - | - | |
|--|---|---|------|-----|-----|-----|------------|------|------|------|---------|------|--------|-------------------------------------|--|
| | FR-CS82S-□-60 | - | - | - | - | - | - | - | - | - | 025 | 042 | 070 | 100 | |
| Applicable motor capacity (kW) ¹⁾ | | 0.4 | 0.75 | 1.5 | 2.2 | 3.7 | 5.5 | 7.5 | 11 | 15 | 0.4 | 0.75 | 1.5 | 2.2 | |
| Output | Rated capacity (kVA) ²⁾ | 0.9 | 1.7 | 2.7 | 3.8 | 6.1 | 9.1 | 12.2 | 17.5 | 22.5 | 1.0 | 1.7 | 2.8 | 4.0 | |
| | Rated current (A) ³⁾ | 1.2 | 2.2 | 3.6 | 5.0 | 8.0 | 12.0 | 16.0 | 23.0 | 29.5 | 2.5 | 4.2 | 7.0 | 10.0 | |
| | Overload current rating ⁴⁾ | 150% 60 s, 200% 0.5 s (inverse-time characteristic) | | | | | | | | | | | | | |
| Power supply | Rated voltage ⁵⁾ | Three-phase 380 to 480 V | | | | | | | | | | | | Three-phase 200 to 240 V | |
| | Rated input AC voltage and frequency | Three-phase 380 to 480 V, 50/60 Hz | | | | | | | | | | | | Single-phase 200 to 240 V, 50/60 Hz | |
| | Permissible AC voltage fluctuation | 325 to 528 V, 50/60 Hz | | | | | | | | | | | | 170 to 264 V, 50/60 Hz | |
| | Permissible frequency fluctuation | ±5% | | | | | | | | | | | | | |
| | Power supply capacity (kVA) ⁶⁾ | 1.5 | 2.5 | 4.5 | 5.5 | 8.5 | 12.0 | 17.0 | 20.0 | 29.0 | 1.5 | 2.3 | 4.0 | 5.2 | |
| Protective structure (JEC 60529) | Open type (IP23) | | | | | | | | | | | | | | |
| Cooling system | Natural | | | | | | Forced air | | | | Natural | | Forced | | |
| Approx. mass (kg) | 0.6 | 0.6 | 0.9 | 0.9 | 1.4 | 1.9 | 1.9 | 3.5 | 3.5 | 0.6 | 0.6 | 1.4 | 1.4 | | |

Outline dimension drawings

FR-CS84-012, 022-60
FR-CS82S-025, 042-60

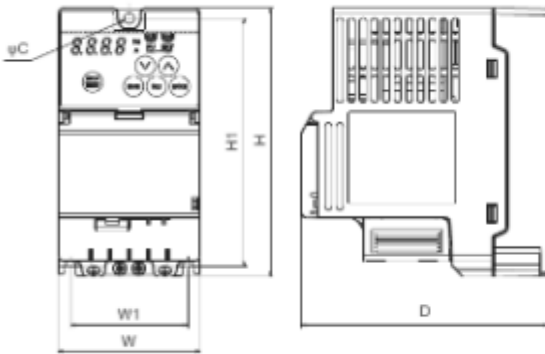

FR-CS84-036, 050, 080, 120, 160, 230, 295-60
FR-CS82S-070, 100-60

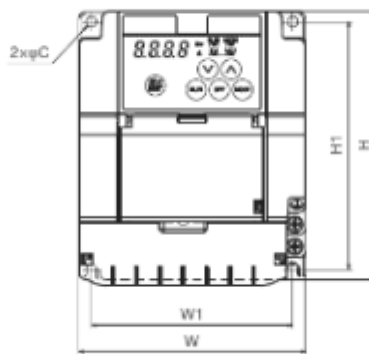

(Unit: mm)

| Inverter model | W | W1 | H | H1 | D | C |
|-----------------|-------|-------|-----|-----|-----|---|
| FR-CS84-012-60 | 68 | 56 | | | 118 | |
| FR-CS84-022-60 | | | 128 | 118 | | |
| FR-CS84-036-60 | | | | | 130 | 5 |
| FR-CS84-050-60 | 108 | 96 | | | 180 | |
| FR-CS84-080-60 | | | 150 | 138 | 134 | |
| FR-CS84-120-60 | 107.5 | 195.5 | | | | |
| FR-CS84-160-60 | | | 160 | 148 | | |
| FR-CS84-230-60 | 100 | 164 | 280 | 244 | 185 | 6 |
| FR-CS84-295-60 | | | | | | |
| FR-CS82S-025-60 | 68 | 56 | | | 118 | |
| FR-CS82S-042-60 | | | 128 | 118 | | |
| FR-CS82S-070-60 | | | | | 160 | 5 |
| FR-CS82S-100-60 | 108 | 96 | | | | |

Terminal connection diagram

